


NOTES:

1. REMOVE EXISTING LEAD, FLASHING MATERIAL & ENSURE THE DRAIN RING IS COMPLETELY CLEAN DOWN TO BARE METAL.
2. THE HOLE IN THE MEMBRANE SHALL EXCEED THE DIAMETER OF THE DRAIN PIPE, BUT SHALL BE NO LESS THAN 1/2" (13mm) FROM THE ATTACHMENT POINTS OF THE DRAIN CLAMPING RING.
3. ALL BOLTS OR CLAMPS MUST BE IN PLACE TO PROVIDE CONSTANT COMPRESSION ON WATER CUT-OFF MASTIC.
4. FIELD SPLICES MUST BE LOCATED AT LEAST 6 INCHES (152mm) OUTSIDE THE DRAIN SUMP.
5. ROOF DRAIN SIZE AND NUMBER OF DRAINS SHALL BE IN ACCORDANCE WITH THE LOCAL CODES.

\*RAPID LOCK TECHNOLOGY IS MAGNIFIED ON SCALE

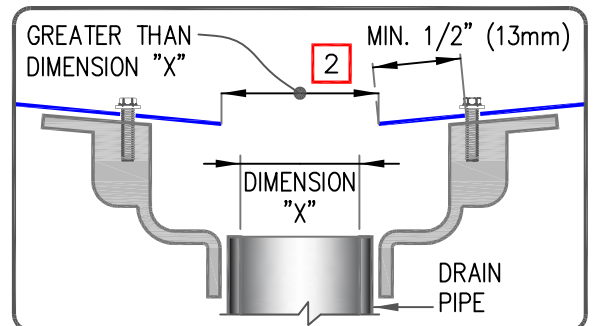

PVC/TPO RL™ (RAPID LOCK) ROOF DRAIN

VERSIFLEECE RL MEMBRANE  
 \*INSULATION BOARD WITH RAPID LOCK TECHNOLOGY  
 SEE NOTE(S)

RAPID LOCK  
 RL-6.2B