


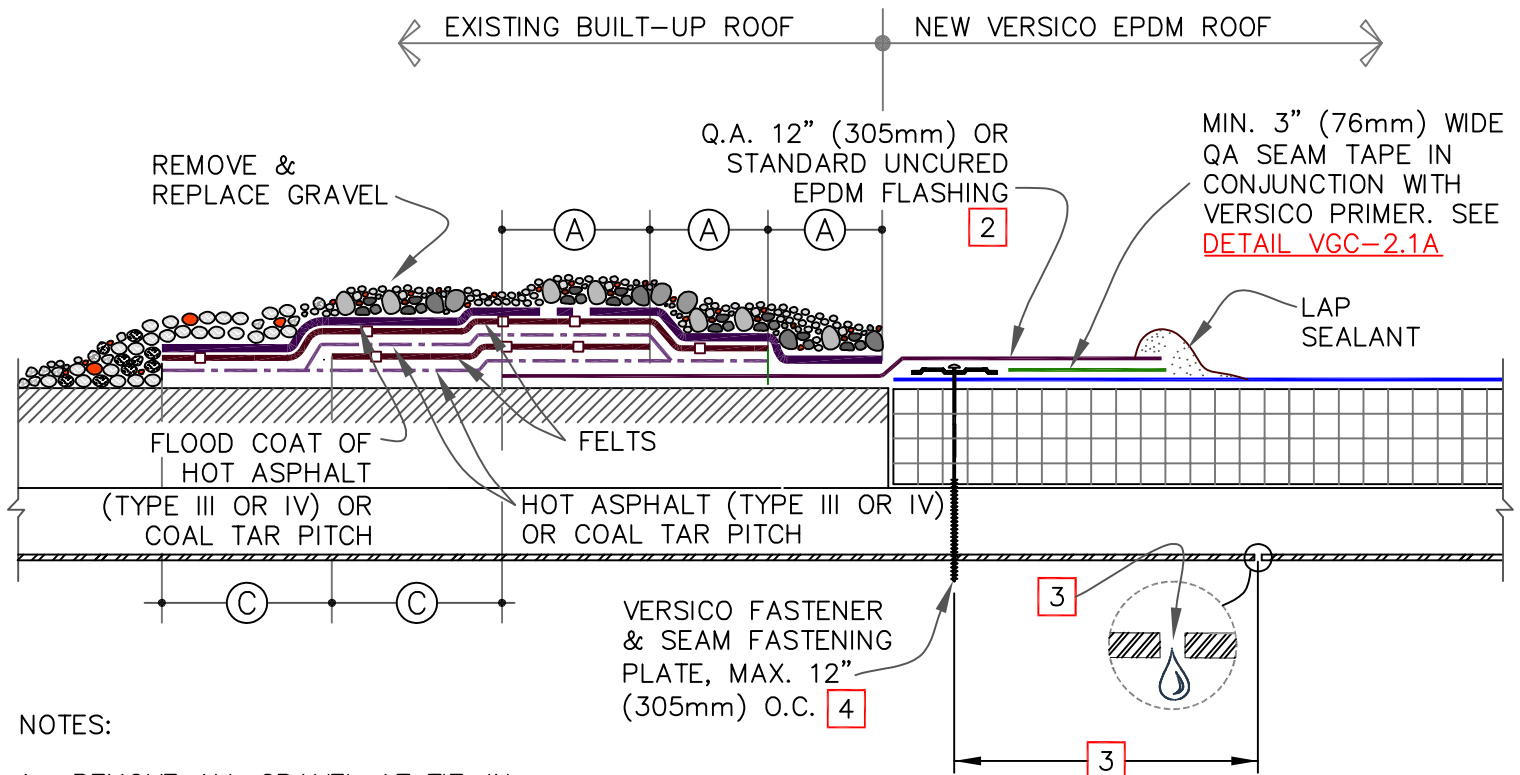

1. REMOVE ALL GRAVEL AT TIE-IN.
2. SPLICE TWO PIECES OF QUICK-APPLIED OR STANDARD UNCURED EPDM TOGETHER TO ACHIEVE DESIRED WIDTH.
3. IF FLUTES ARE PERPENDICULAR TO THE TIE-IN DRILL A 3/8" (10mm) DIAMETER WEEP HOLE ON THE BOTTOM FLUTES OF THE STEEL DECK ALONG THE PERIMETER TO THE TIE-IN 6" (152mm) MINIMUM TO 12" (305mm) MAXIMUM FROM THE SEAM FASTENING PLATE.
4. ON MECHANICALLY ATTACHED SYSTEMS, HPV FASTENERS AND POLYMER SEAM PLATES ARE REQUIRED OVER STEEL DECKS.
5. IF WATER PONDS OR FLOWS OVER TIE-IN FROM BUR SURFACE, USE [DETAIL VGC-13.2](#).
6. ON BALLASTED SYSTEMS, USE CONCRETE PAVERS TO PREVENT BALLAST MIGRATION.

| DIMENSIONS | mm |                  |
|------------|----|------------------|
| (A)        | 5" | 127 MIN.         |
| (B)        | 2" | 51 ± 1/2" (13mm) |
| (C)        | 6" | 152              |

